

Installation Guide

Unmanaged Desktop PoE+ Switch

LED Explanation

Power

On: Power on
Off: Power off

Link/Act; Uplink 1, Uplink 2

Green On:
 Running at 1000 Mbps, but no activity.
Green Flashing:
 Running at 1000 Mbps and is transmitting or receiving data.
Yellow On:
 Running at 10/100 Mbps, but no activity.
Yellow Flashing:
 Running at 10/100 Mbps and is transmitting or receiving data.
Off:
 No device is linked to the corresponding port.

PoE Status

On: Providing PoE power
Flashing: PoE fault
Off: Not providing PoE power

PoE Max

For DS108GPL:
On: $57\text{ W} \leq \text{Total power supply} < 64\text{ W}$
Flashing: Total power supply $\geq 64\text{ W}$
Off: Total power supply $< 57\text{ W}$
For DS110GMP:
On: $116\text{ W} \leq \text{Total power supply} < 123\text{ W}$
Flashing: Total power supply $\geq 123\text{ W}$
Off: Total power supply $< 116\text{ W}$

Switches Explanation

Note: The numbers in brackets indicate the ports where the feature takes effect. For example, when Extend(1-4) is toggled to On, the Extend mode will be enabled for ports 1-4.

Extend (for DS108GPL/DS110GMP)

Off: Ports run at 10/100/1000 Mbps and support PoE power supply up to 100 m away.
On: Ports run at 10 Mbps and support PoE power supply up to 250 m away.

Priority (for DS110GMP)

Off: All the ports transmit data with the same priority.
On: The specific ports transmit data with a higher priority than other ports.


Recovery (for DS108GPL/DS110GMP)

Off: The PoE Auto Recovery function is disabled.
On: The switch will constantly detect the working status of a PoE powered device (PD). When the switch finds that the PD works abnormally, the switch will reboot it.

Isolation (for DS110GMP)

Off: Ports can transmit data with each other.
On: Specific ports cannot transmit data with other downlink ports. They can transmit data only with the uplink ports.

Note: For simplicity, we will take DS108GPL for example throughout the Guide.

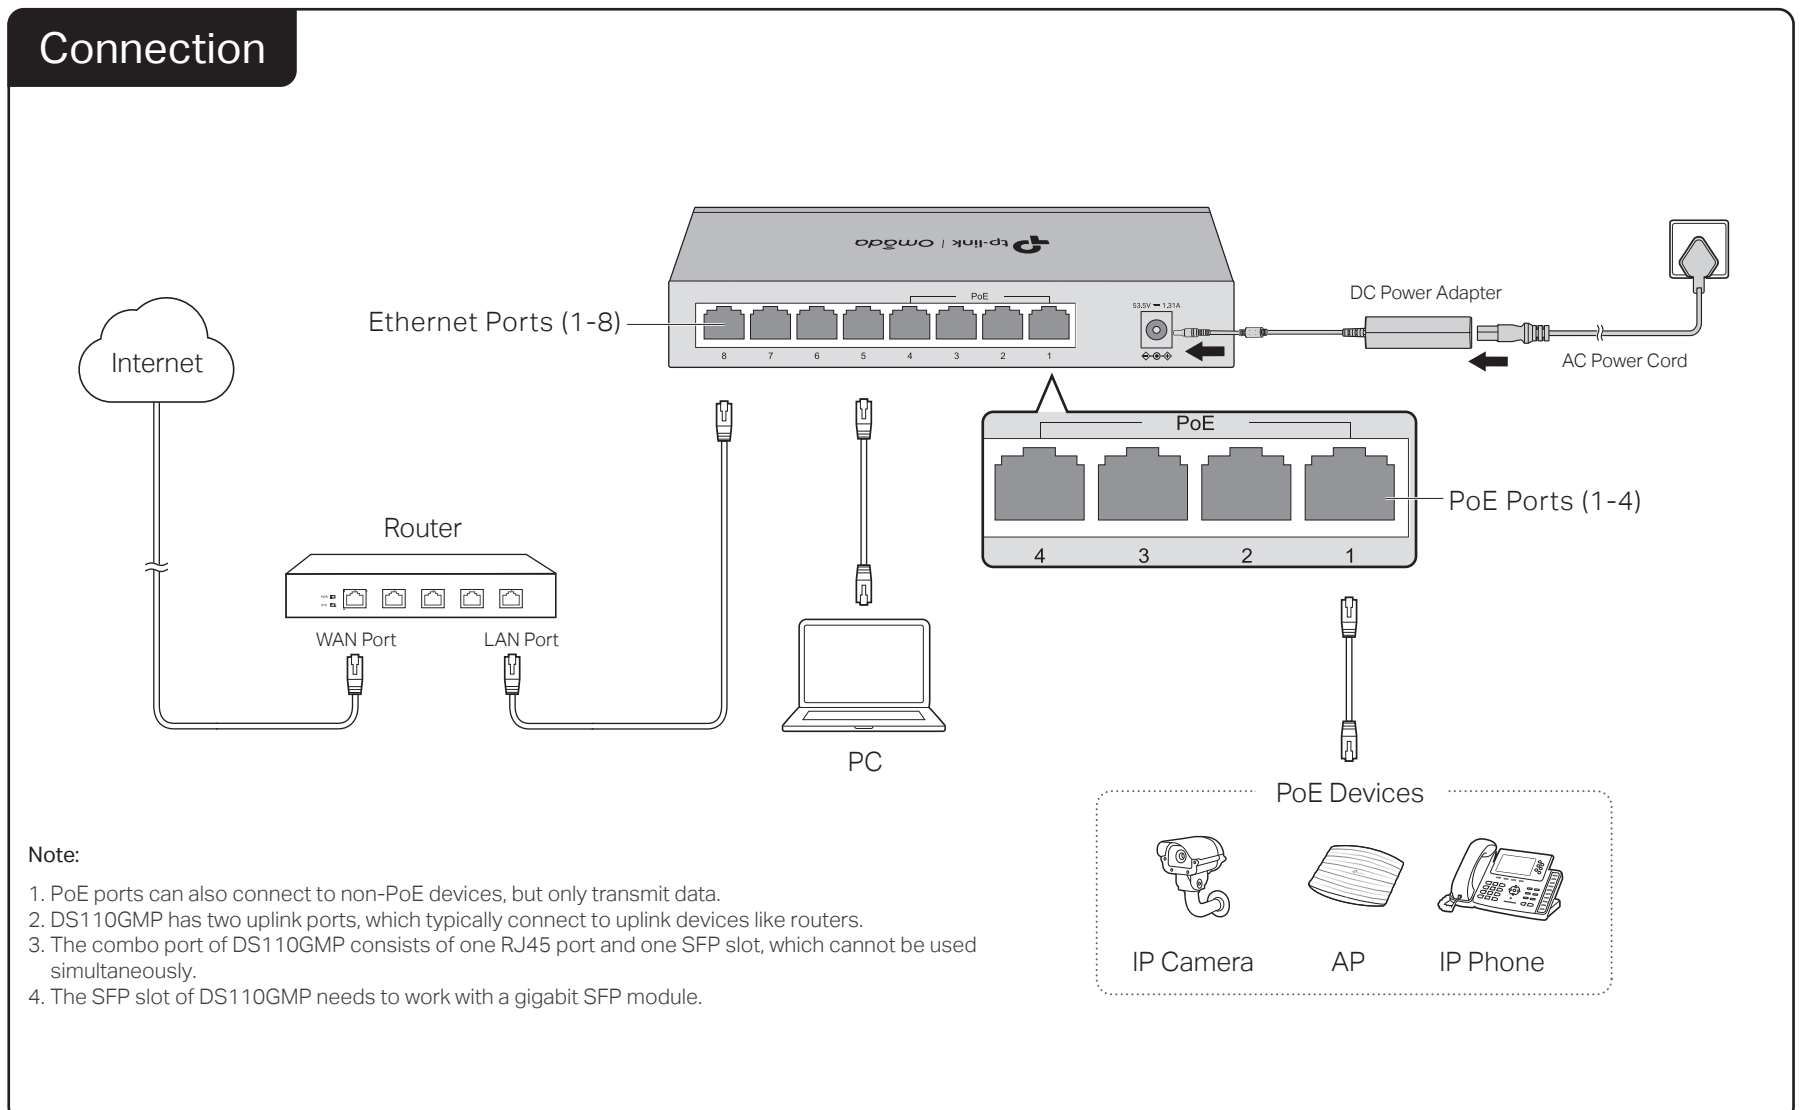

Frequently Asked Questions (FAQ)

Q1. The Power LED is not lit.

The Power LED should be lit when the power system is working normally. If the Power LED is not lit, please check as follows:

A1: Make sure the AC power cord is connected the switch with power source properly.

A2: Make sure the voltage of the power supply meets the requirements of the input voltage of the switch.

A3: Make sure the power source is on.

Q2. Why is the Link/Act LED not lit while a device is connected to the corresponding port?

It is recommended that you check the following items:

A1: Make sure that the cable connectors are firmly plugged into the switch and the device.

A2: Make sure the connected device is turned on and working well.

A3: The cable must be less than 100 meters long (328 feet). If Extend Mode is enabled, it should be less than 250 meters (820 feet).

Q3. Why is PoE/PoE+ Port not supplying power for PoE devices?

When the total power consumption of connected PoE devices exceeds the maximum, the PoE port with a smaller port number has a higher priority. The system will cut off power to the ports with larger port numbers to ensure supplying to other ports.

Take DS108GPL as an example. If port 1, 2 and 4 are consuming 15.4 W respectively, and an additional PoE device with 20 W is connected to port 3, the system will cut off the power of port 4 to compensate for the overload.

Q4. What should I notice before using the PoE Auto Recovery feature?

A1: Before upgrading a connected PoE powered device (PD), disable PoE Auto Recovery to avoid the PD's damage.

A2: When a PD does not send data packets to the switch for a long period in certain scenarios (e.g. an IPC in sleep mode), disable PoE Auto Recovery to avoid the PD repeatedly rebooting.

Environmental and Physical Specifications

Operating Temperature	0 °C to 40 °C (32 °F to 104 °F)
Storage Temperature	-40 °C to 70 °C (-40 °F to 158 °F)
Operating Humidity	10% to 90%RH non-condensing
Storage Humidity	5% to 90%RH non-condensing

EU declaration of conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/30/EU, 2014/35/EU, 2011/65/EU and (EU)2015/863.

The original EU declaration of conformity may be found at <https://www.tp-link.com/en/support/ce/>

UK declaration of conformity


TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of the Electromagnetic Compatibility Regulations 2016 and Electrical Equipment (Safety) Regulations 2016.

The original UK declaration of conformity may be found at <https://www.tp-link.com/support/ukca>

Specifications

General Specifications

Standard	IEEE 802.3i, IEEE 802.3u, IEEE 802.3ab, IEEE 802.3x, IEEE 802.3af, IEEE 802.3at, IEEE 802.1p, IEEE 802.3z (For DS110GMP only)
Interface	For DS108GPL: 8 10/100/1000 Mbps RJ45 Ports, Auto-Negotiation MDI/MDIX; PoE Ports: Port 1-4 For DS110GMP: 10 10/100/1000 Mbps RJ45 Ports, Auto-Negotiation MDI/MDIX; 1 1000 Mbps SFP port (Combo); PoE Ports: Port 1-8
Network Media (Cable)	10BASE-T: UTP category 3, 4, 5 cable (maximum 100 m); EIA/TIA-568 100 Ω STP (maximum 100 m) 100BASE-TX: UTP category 5, 5e cable (maximum 100 m); EIA/TIA-568 100 Ω STP (maximum 100 m) 1000BASE-T: UTP category 5e cable or above (maximum 100 m); EIA/TIA-568 100 Ω STP (maximum 100 m) 1000BASE-SX/LX/LX10/BX10: MMF, SMF (For DS110GMP only)
Switching Capacity	DS108GPL: 16 Gbps DS110GMP: 20 Gbps
Transfer Method	Store-and-Forward
MAC Address Learning	Automatically learning, automatically aging
Power Supply	Input: 100-240 VAC, 50/60 Hz Output: 53.5 V DC/2.43 A (For DS110GMP) 53.5 V DC/1.31 A (For DS108GPL)
PoE Budget	DS108GPL: 64 W (up to 30 W for each PoE port) DS110GMP: 123 W (up to 30 W for each PoE port)
Wall Mountable	Yes
Distance Between Mounting Holes	DS108GPL: 105 mm DS110GMP: 150 mm

 To ask questions, find answers, and communicate with TP-Link users or engineers, please visit <https://community.tp-link.com> to join TP-Link Community.

 For technical support and other information, please visit <https://www.tp-link.com/support>, or simply scan the QR code.



Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Place the device with its bottom surface downward.
- Do not use damaged charger or USB cable to charge the device.
- Do not use any other chargers than those recommended.
- Adapter shall be installed near the equipment and shall be easily accessible.
- The plug on the power supply cord is used as the disconnect device, the socket-outlet shall be easily accessible.

